

# vCam-6

## Quick Guide V1.2



### Standard package includes:

- SD card
- USB thumb drive
- Ethernet cable
- 12V DC power cord
- AC power cord
- Camera removal tool
- Flat screwdriver
- CD with user handbook & codecs
- Carry pouch

Refer to the user manual for detailed instructions, safety and care information.

**Fuse** – Make sure the 10A-250V fuse is installed in the fuse compartment on the back of the unit.

### Vivax-Metrotech Corporation (USA)

3251 Olcott Street, Santa Clara, CA 95054, USA  
 T/Free: 800-446-3392 Tel: +1-408-734-1400  
 Fax: +1-408-734-1415 Email: sales@vxmt.com

### Vivax-Metrotech Ltd. (UK)


Unit 1, B/C Polden Business Centre, Bristol Road,  
 Bridgwater, Somerset, TA6 4AW, UK  
 Tel: +44(0)1793 822679 Email: salesUK@vxmt.com

### Vivax Canada Inc. (Canada)

41 Courtland Ave Unit 6, Vaughan, ON L4K 3T3, Canada  
 Tel: +1-289-846-3010 Fax: +1-905-752-0214  
 Email: CanadianSales@vxmt.com


## Control Module Interface

### Media Ports (left side)

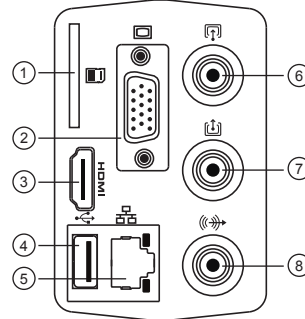

1	SD Card Slot
2	VGA Port
3	HDMI Out Port
4	USB Port
5	RJ45 Ethernet Port
6	Video In Socket
7	Video Out Socket
8	Audio Out Socket


### Main Controls (front panel)

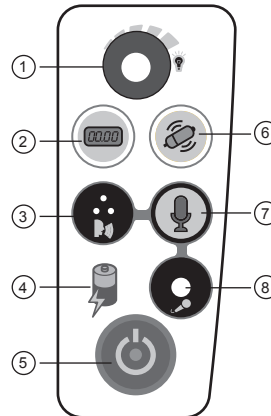

1	LED Dimmer Control
2	Distance Counter Reset*
3	Internal Microphone
4	Battery Charging Indicator
5	Power On/Off
6	Sonde On/Off
7	Microphone On/Off
8	External Microphone Socket


\*Note that it is important that you verify the actual position and depth with a Sonde Locator or Pipe & Cable Locator before excavating pipe.

## Video Recording/Playback Controls

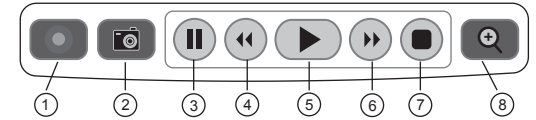


1	Start / Stop Video Recording
2	JPEG Snapshot Capture
3	Pause Video Recording or Playback
4	Rewind Video Playback
5	Play Video
6	Fast Forward Video Playback
7	Stop Video Recording or Playback
8	Digital Zoom

## Power/Interconnect Sockets (right side)

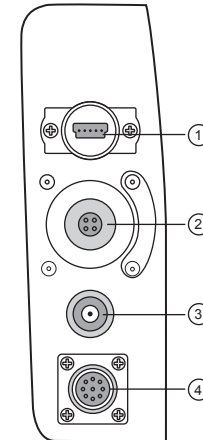

1	Data Port
2	Camera Head Test Port
3	External 12V DC Power (IN) Socket
4	Reel Interconnect Cable Socket


## AC in Power Socket (bottom left side)

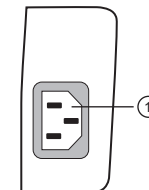

1	AC Power (IN) Socket
---	----------------------

## Mounting the Control Module

1. Line up the control module's mounting pins(a) to the open slots on the reel mounting plate.
2. Lower the control module into the reel mounting plate(b).
3. Standing in front of the control module, push the bottom of the control module backwards until the control module locks in place.

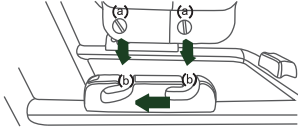

### NOTE


Do not use the Control Module as a handle to move the reel. Move the reel only by the reel's handle.



## Using the Reels

**Cage Lock** - Unlock the cage lock by pulling the T - knob (B), turning it a ¼ turn and releasing, so pin falls into keyed slot (C).

**Friction Brake** - Set the friction brake (A) to slow the movement of the cable rod drum.

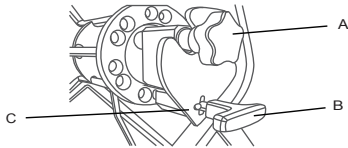

**Cable Guide** - Turn the reel so that the push rod goes through the cable guide.





## Keyboard Function Keys

Keys	Function	Description
ESC	Menu step back and clear text	Returns to the previous screen or clears text from the screen
F1 Help	Help	Control Module help and information screens


F2 Info	On-Screen Distance, Date and Time	Toggles information position on screen. Bottom, Top, Off
Ctrl + F2	Information Color	Changes the text color of the on screen Distance
Ctrl + F3	Text Writer On/Off	Turns the text writer on and off
F3	Text Color	Changes the text writer font color
F4	Background Color	Changes the background color of the text writer
F5	Recall Saved Page	Recalls saved pages from memory
F6	Save Page	Save current page to memory
F7	Delete Page	Delete current page from memory
F8	Delete All Pages	Delete all saved pages from memory
F9	Display Setting	Adjust LCD display settings
F10	Menu	Access File and Setup Menus
F11	Font	Toggles through different text fonts
F12	WiFi On/Off	Turns WiFi on and off

## Basic Functions


### Video Recording:

1. Press  to start recording.
2. Press  to stop recording and return to live camera.

### Snapshot Recording:

1. Press the  camera key to take snapshots when viewing or recording from the camera or during video playback.

### Zooming:

1. Press  to activate zoom window.
2. Use the arrow keys to select area to zoom, then press enter.
3. Repeat these steps to use three levels of zoom.

## vCam-6 Menu Navigation

Use the **F10** Menu key to open the “File Menu”. Use the **Left/Right arrow** keys to move through the various menu sections.

Use the **Up/Down arrow** keys to select files or actions.

To select multiple files to copy, move or delete, highlight the file and press the Enter Key to check off multiple files. Press the TAB key to select the full page of videos or pictures.

Press the **ESC key** at any time to go back to the previous menu selection and main menu.

## Video Playback and Viewing Snapshots

Press **Menu key** to bring up the File Menu.

Use up/down keys to select Video, Picture or All Files, right arrow to video or picture file list, use down arrow to highlight video to play or picture to view, right arrow to Play and press Enter or use right arrow to play or view.

## Copy, Move, Delete or Rename Videos and Pictures

Insert a USB stick or SD card into the media port on left side of control module.

Follow the above Menu Navigation instructions but for the last step select Copy, Move, Delete, or Rename as the action.

A progress indicator will appear on the screen showing the time remaining for the file copy, move or deletion. Wait until the progress indicator goes away and the main file menu is displayed before removing the USB stick or SD card.

### NOTE

**Copy** = Makes a copy of the video or picture on a USB stick or SD card. The original still remains on the hard drive.

**Move** = Moves the file from the hard drive to the USB stick or SD card. No file remains on the hard drive.

**Delete** = Deletes the file from the hard drive.



### TIPS

It is not recommended that the internal hard drive is used for long term storage. It is good practice to do regular backups and transfer of videos and pictures to an external storage device or office/home computer.

**Disclaimer:** Product and accessory specification and availability information is subject to change without prior notice.

P/N: 4.04.000088